 
 


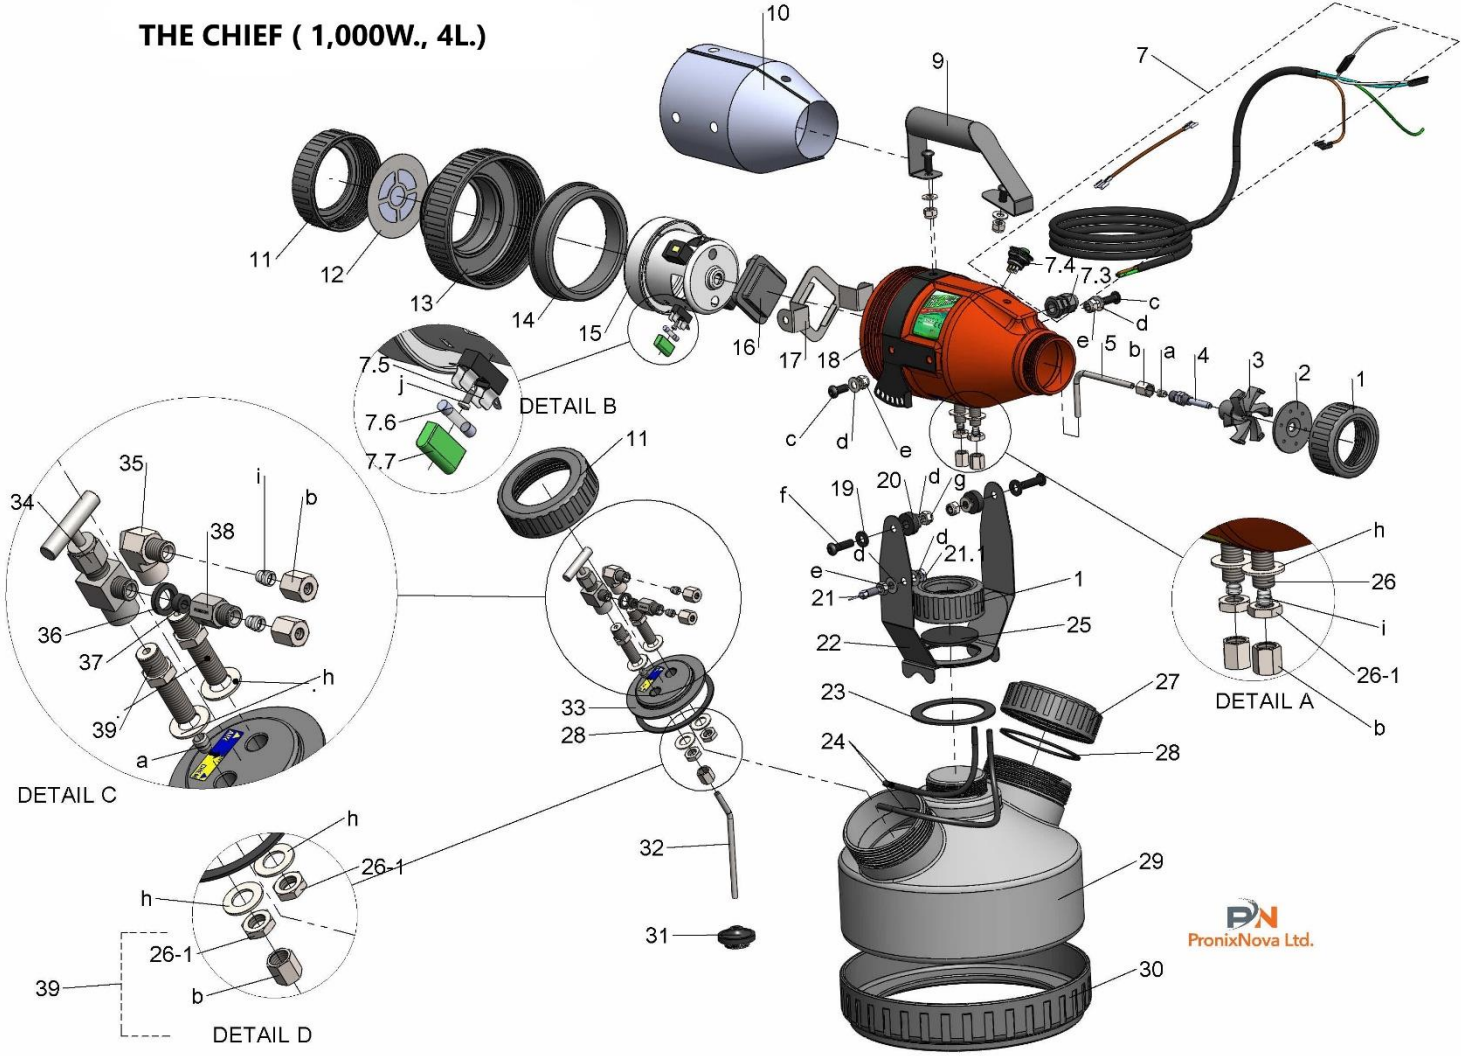




THE CHIEF (1,000W., 4L.)

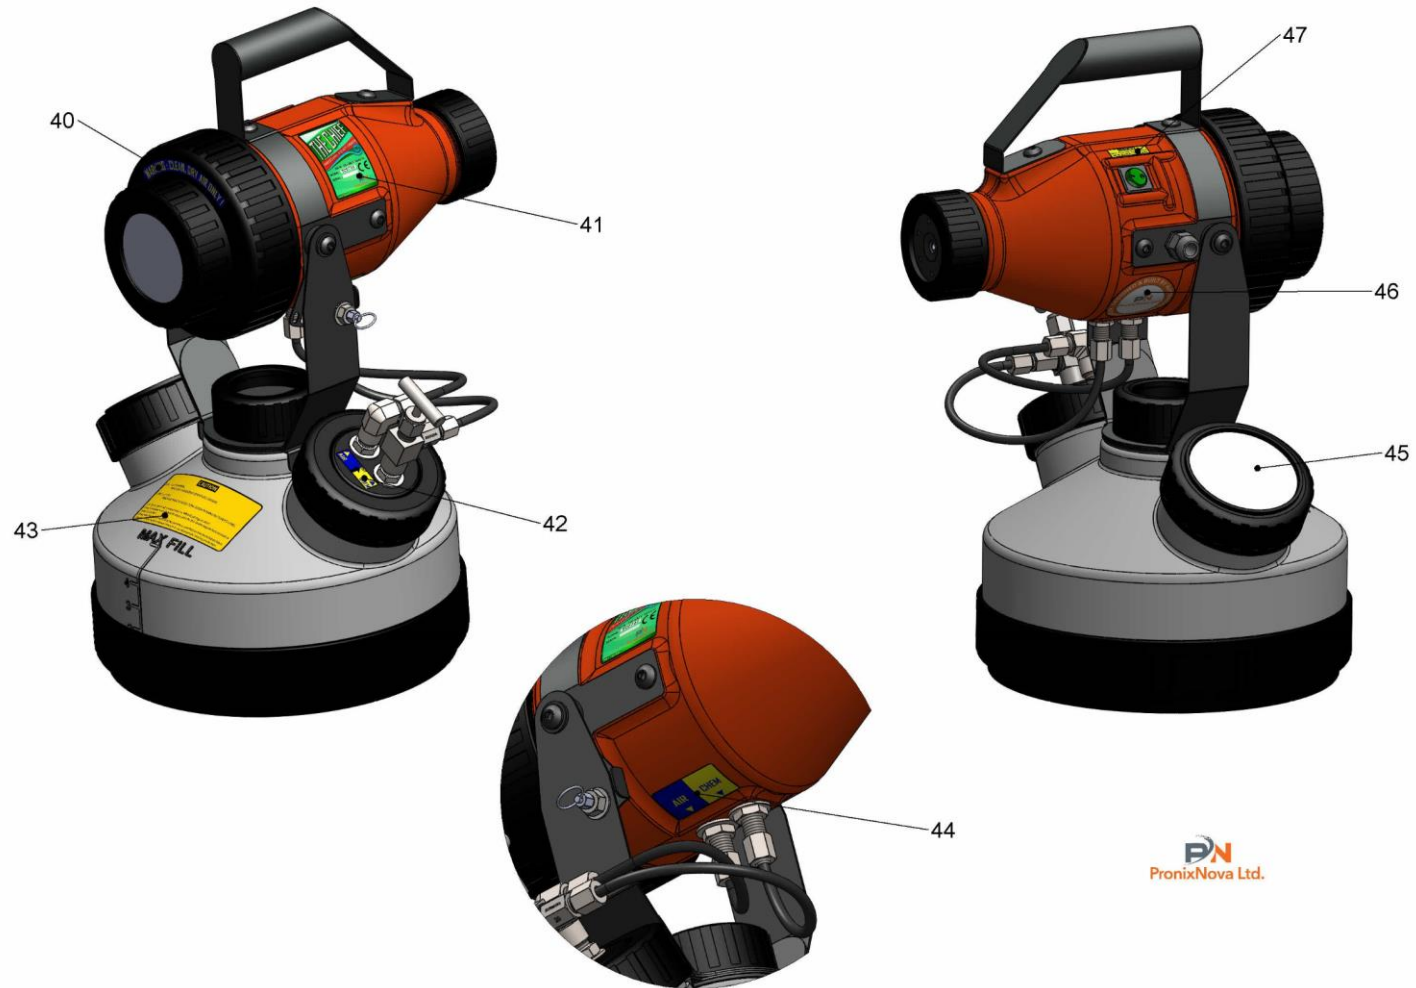




THE CHIEF (1,000W., 4L.)




	PART NO.		PICTURE	DESCRIPTION
NO.	THE CHIEF 1000	DWG. NO.	THE CHIEF 1000	THE CHIEF 1000
1	01-004-PM	01-004-PM		CAP NOZZLE & TANK
2	04-026-PM	04-026-PM		PLATE,NOZZLE FACE
3	01-009-AM-SST	01-009-PM		DIFFUSER
4	04-003-AM-SST	040003-AM		NOZZLE, M12x1.5 & SPACER NUT-SSTL
5		04-023-PM		TUBE ,NOZZLE, SSTL OD 6 mm.,SSTL(THE CHIEF)

	PART NO.		PICTURE	DESCRIPTION
NO.	THE CHIEF 1000	DWG. NO.	THE CHIEF 1000	THE CHIEF 1000
a	04-016-PP-SST	04-016-PP		NUT,COMPRESSION 6L,SSTL
b	04-019-PP-SST	04-019-PP		FERRULE,SSTL
c	07-020-PP	07-020-PP		HEXAGON SOCKET BUTTON HEAD CAP SCREW M8x20)
d	07-023-PP	07-023-PP		SUS PLAIN WASHER M8
e		07-026-PP		SUS NUT,M8x1.25






	PART NO.		PICTURE	DESCRIPTION
NO.	THE CHIEF 1000	DWG. NO.	THE CHIEF 1000	THE CHIEF 1000
f		07-021-PP		HEXAGON SOCKET BUTTON HEAD CAP SCREW M8x30)
g		07-022-PP		SUS LOCK NUT,M8x1.25x13x8
h		07-025-PP		SUS PLAIN WASHER,M12
i		04-062-PP		FURRULE FOR NYLON HOSE OD 6 mm.
j		07-027-PP		SUS CROSS PAN HEAD TAPPING SCREW #4x3/8






	PART NO.		PICTURE	DESCRIPTION
NO.	THE CHIEF 1000	DWG. NO.	THE CHIEF 1000	THE CHIEF 1000
6(1)	N/A	01-010-PM	-	N/A
6(2)	01-001-PM-ORG			BODY,THE CHIEF-ORANGE
7	05-005-AM-EU			ELECTRICAL CABLE SET
7.1	05-006-PM-EU			MAIN CABLE
7.2	05-007-PP			CONNECTING WIRE

	PART NO.		PICTURE	DESCRIPTION
NO.	THE CHIEF 1000	DWG. NO.	THE CHIEF 1000	THE CHIEF 1000
7.3	05-004-PP-BLK	05-004-PP		CABLE GLAND,PG9, BLACK
7.4	05-003-PP-GRN	05-003-PP		ROCKER SWITCH (GREEN)
7.5	05-008-PP			FUSE HOLDER
7.6	05-009-PP			FUSE 10 A.
7.7	05-010-PP			FUSE COVER

	PART NO.		PICTURE	DESCRIPTION
NO.	THE CHIEF 1000	DWG. NO.	THE CHIEF 1000	THE CHIEF 1000
9	02-019-AM	02-005-AM		HANDLE ASSY,THE CHIEF
10	08-031-PM	08-030-PM		HEAT SHIELD,THE CHIEF
11	01-006-PM	01-006-PM		CAP-VALVE ASSY & REAR ,SMALL
12	08-034-AM	08-034-AM		FILTER,PAD (PNL NEW DESIGN)
12.1	02-017-PM	02-017-PM		DISC,FILTER PAD




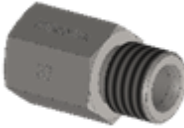 

	PART NO.		PICTURE	DESCRIPTION
NO.	THE CHIEF 1000	DWG. NO.	THE CHIEF 1000	THE CHIEF 1000
12.2	08-034-PM	08-034-PM		PU FOAM
13	01-005-PM	01-0011-PM		CAP,REAR, LARGE,THE CHIEF
14	03-019-PM	03-017-PM		RUBBER HOUSING,MOTOR-THE CHIEF
15	05-003-PP-SAM	05-001-PP-SAM		MOTOR,SAMSUNG ,700 W. 220V.
16	03-003-PM	03-003-PM		CUSHION PAD,MOTOR (EPDM-50)






	PART NO.		PICTURE	DESCRIPTION
NO.	THE CHIEF 1000	DWG. NO.	THE CHIEF 1000	THE CHIEF 1000
17	02-011-PM	02-004-PM		BRACKET ANTI-TORQUE, THE CHIEF
18	02-010-PM	02-002-PM		BAND BRACKET,HOLDER-THE CHIEF
19	03-007-PM	03-007-PM		WASHER,RUBBER THIN (EPDM-70)
20	03-013-PM	03-013-PM		WASHER,RUBBER SPACER (EPDM-70)
21	04-020-AP-STL	04-020-AP		SPRING LOCK ELEVATION SETTING,ASSY,STEEL (metric)

	PART NO.		PICTURE	DESCRIPTION
NO.	THE CHIEF 1000	DWG. NO.	THE CHIEF 1000	THE CHIEF 1000
22	02-009-AM	02-001-AM		FRAME,BODY SUPPORT-THE CHIEF
23	03-001-PM	03-001-PM		WASHER,RUBBER FRICTION (NBR-60)
24	08-041-PP	08-041-PP		TUBE,NYLON,OD 6 mm. LIQUID AND AIR
25	03-006-PM	03-006-PM		NOZZLE PROTECTOR DISC, STORAGE (NR-60)
26	04-015-AP-SST	04-015-AP		BULKHEAD,UNION 6L-6L,ASSY,SSTL

	PART NO.		PICTURE	DESCRIPTION
NO.	THE CHIEF 1000	DWG. NO.	THE CHIEF 1000	THE CHIEF 1000
27	01-007-PM	01-007-PM		CAP,FILLER
28	03-002-PM	03-002-PM		GASKET,VITON,CAP, FILLER & VALVE ASSY(VITON-65)
29	01-002-PM-WHT	01-003-PM-WHT		TANK,FORMULATION-4L (NATURAL WHITE)
30	03-005-PM	03-005-PM		BOOT,TANK BASE PROTECTOR
31	03-016-PM	03-016-PM		FILTER ,TANK

	PART NO.		PICTURE	DESCRIPTION
NO.	THE CHIEF 1000	DWG. NO.	THE CHIEF 1000	THE CHIEF 1000
32	04-028-PM-SST	04-029-PM		PICK-UP TUBE,SSTL OD 6 mm.,4L TANK
33	01-008-PM	01-008-PM		ADAPTER,CAP LIQ-AIR FLOW,LOW PROFILE
34	04-006-AP-SST	04-006-AP		NEEDLE VALVE ASSY-SSTL
35	04-013-AP-SST	04-013-AP		ELBOW 1/4 NPT-6L,ASSY,SSTL
36	03-015-PM	03-015-PM		SEAL WASHER, OUTER, FSFR VALVE

	PART NO.		PICTURE	DESCRIPTION
NO.	THE CHIEF 1000	DWG. NO.	THE CHIEF 1000	THE CHIEF 1000
37	03-014-PM-M12	03-014-PM		SEAL WASHER,FSFR VALVE (M12)- VITON -70
38-1	04-001-PM-20S	04-001-PM		FSFR VALVE,M12x1.5,SSTL,#20
38-2	04-001-PM-S28	04-001-PM		FSFR VALVE-M12x1.5,SSTL,#28
38-3	04-001-PM-S37	04-001-PM		FSFR VALVE-M12x1.5,SSTL,#37
38-4	04-001-PM-S42	04-001-PM		FSFR VALVE-M12x1.5,SSTL,#42

	PART NO.		PICTURE	DESCRIPTION
NO.	THE CHIEF 1000	DWG. NO.	THE CHIEF 1000	THE CHIEF 1000
38-5	04-001-PM-S47	04-001-PM		FSFR VALVE-M12x1.5,SSTL,#47
39	04-014-AP-SST	04-014-AP		BULKHEAD, 6L-1/4NPT.ASSY,SSTL
40	08-011-PM	08-011-PM		LABEL, WARNING ON CAP,REAR,LARGE
41	08-004-PM	08-001-PM		LABEL, MACHINE ID.-THE CHIEF 700 W
42	08-015-PM	08-015-PM		LABEL,LIQ-AIR PATHWAY,ADAPTER LOW PROFILE

	PART NO.		PICTURE	DESCRIPTION
NO.	THE CHIEF 1000	DWG. NO.	THE CHIEF 1000	THE CHIEF 1000
43	08-009-PM	08-009-PM		LABEL, CAUTION ON TANK
44	08-007-PM	08-007-PM		LABEL, LIQ-AIR PATHWAY ON BODY
45	08-010-PM	08-010-PM		LABEL, FILLER CAP
46	08-014-PM	08-014-PM		LABEL, AUSTRALIAN-BRITISH CONSORTIUM
47	08-006-PM	08-006-PM		LABEL, CAUTION, BEFORE SWITCH OFF