 
 


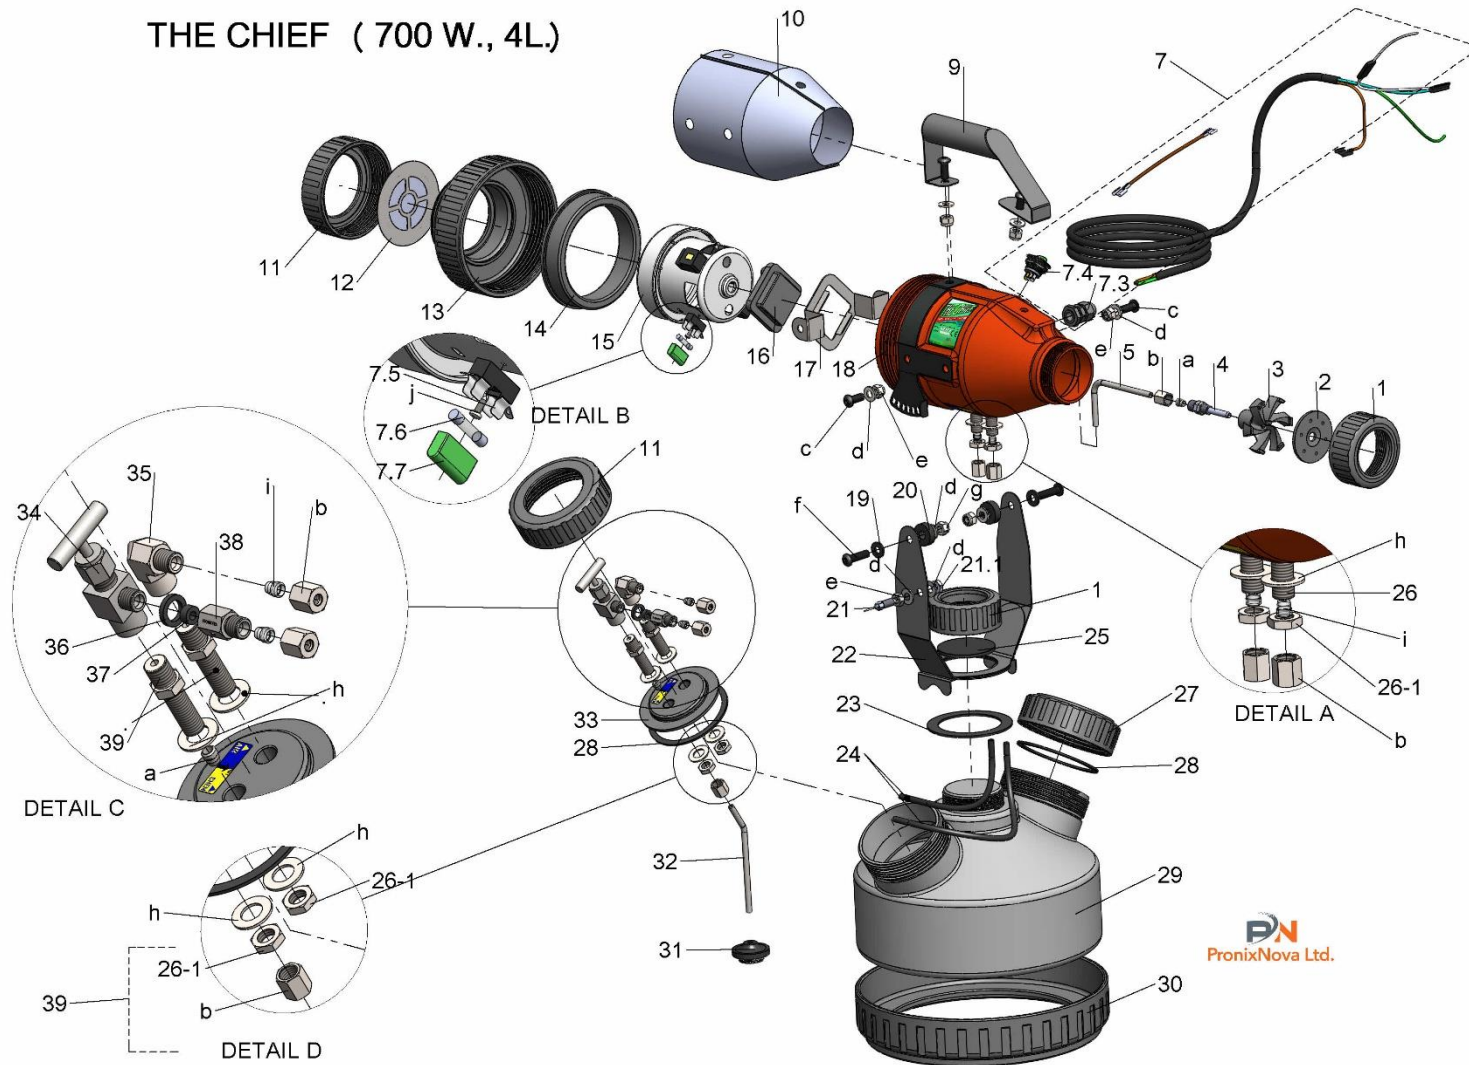




THE CHIEF (700 W., 4L.)

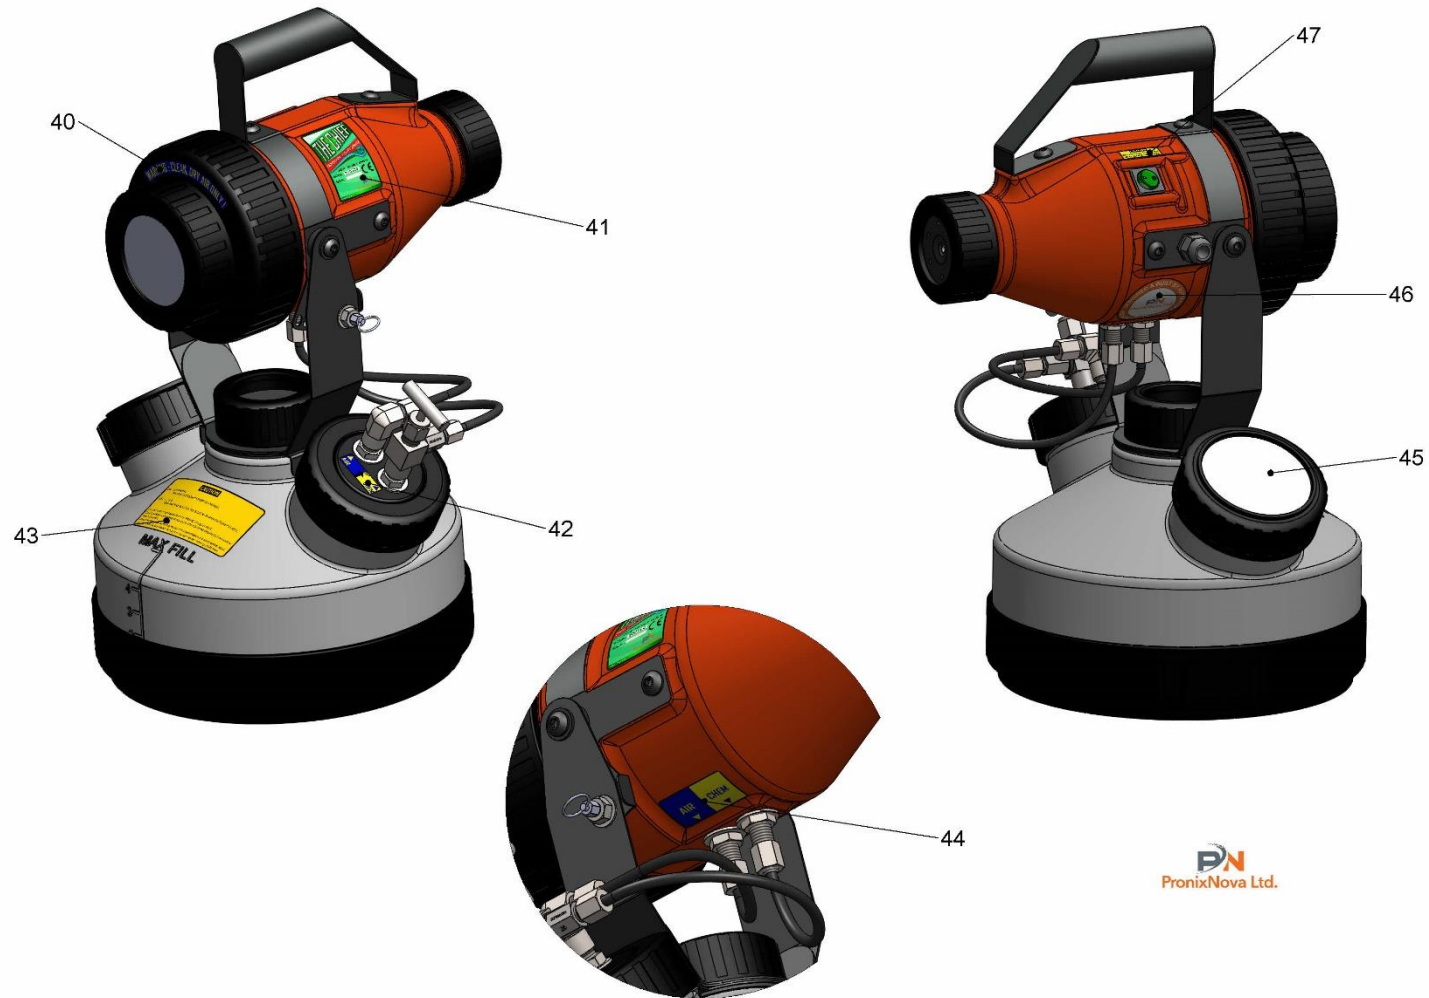






THE CHIEF (700 W., 4L.)



 




NO.	PART NO.		DWG. NO.	PICTURE		DESCRIPTION	
	THE BOSS	THE CHIEF 700		THE BOSS	THE CHIEF 700	THE BOSS	THE CHIEF 700
1	01-004-PM		01-004-PM			CAP NOZZLE & TANK	
2	04-026-PM		04-026-PM			PLATE,NOZZLE FACE	
3	01-009-AM-SST		01-009-PM			DIFFUSER	
4	04-003-AM-SST		040003-AM			NOZZLE, M12x1.5 & SPACER NUT-SSTL	
5	04-023-PM-SST		04-023-PM			TUBE ,NOZZLE, SSTL OD 6 mm.,SSTL(THE BOSS/MINI BOSS)	TUBE ,NOZZLE, SSTL OD 6 mm.,SSTL(THE CHIEF)



NO.	PART NO.		DWG. NO.	PICTURE		DESCRIPTION	
	THE BOSS	THE CHIEF 700		THE BOSS	THE CHIEF 700	THE BOSS	THE CHIEF 700
a	04-016-PP-SST		04-016-PP			NUT,COMPRESSION 6L,SSTL	
b	04-019-PP-SST		04-019-PP			FERRULE,SSTL	
c	07-020-PP		07-020-PP			HEXAGON SOCKET BUTTON HEAD CAP SCREW M8x20)	
d	07-023-PP		07-023-PP			SUS PLAIN WASHER M8	
e	07-026-PP		07-026-PP			SUS NUT,M8x1.25	








NO.	PART NO.		DWG. NO.	PICTURE		DESCRIPTION	
	THE BOSS	THE CHIEF 700		THE BOSS	THE CHIEF 700	THE BOSS	THE CHIEF 700
f	07-021-PP		07-021-PP			HEXAGON SOCKET BUTTON HEAD CAP SCREW M8x30)	
g	07-022-PP		07-022-PP			SUS LOCK NUT, M8x1.25x13x8	
h	07-025-PP		07-025-PP			SUS PLAIN WASHER, M12	
i	04-062-PP		04-062-PP			FURRULE FOR NYLON HOSE OD 6 mm.	
j	07-027-PP		07-027-PP			SUS CROSS PAN HEAD TAPPING SCREW #4x3/8	







NO.	PART NO.		DWG. NO.	PICTURE		DESCRIPTION	
	THE BOSS	THE CHIEF 700		THE BOSS	THE CHIEF 700	THE BOSS	THE CHIEF 700
6(1)	01-010-PM-GRN	N/A	01-010-PM		-	BODY,THE BOSS-GREEN	N/A
6(2)	01-010-PM-ORG	01-001-PM-ORG				BODY,THE BOSS-ORANGE	BODY,THE CHIEF-ORANGE
7	05-005-AM-EU					ELECTRICAL CABLE SET	
7.1	05-006-PM-EU					MAIN CABLE	
7.2	05-007-PP					CONNECTING WIRE	

NO.	PART NO.		DWG. NO.	PICTURE		DESCRIPTION	
	THE BOSS	THE CHIEF 700		THE BOSS	THE CHIEF 700	THE BOSS	THE CHIEF 700
7.3	05-004-PP-BLK		05-004-PP			CABLE GLAND,PG9, BLACK	
7.4	05-003-PP-GRN		05-003-PP			ROCKER SWITCH (GREEN)	
7.5	05-008-PP					FUSE HOLDER	
7.6	05-009-PP					FUSE 10 A.	
7.7	05-010-PP					FUSE COVER	



NO.	PART NO.		DWG. NO.	PICTURE		DESCRIPTION	
	THE BOSS	THE CHIEF 700		THE BOSS	THE CHIEF 700	THE BOSS	THE CHIEF 700
9	02-005-AM	02-019-AM	02-005-AM			HANDLE ASSY,THE BOSS/MINIBOSS	HANDLE ASSY,THE CHIEF
10	08-030-PM	08-031-PM	08-030-PM			HEAT SHIELD ,THE BOSS/MINI BOSS	HEAT SHIELD,THE CHIEF
11	01-006-PM		01-006-PM			CAP-VALVE ASSY & REAR ,SMALL	
12	08-034-AM		08-034-AM			FILTER,PAD (PNL NEW DESIGN)	
12.1	02-017-PM		02-017-PM			DISC,FILTER PAD	




 

NO.	PART NO.		DWG. NO.	PICTURE		DESCRIPTION	
	THE BOSS	THE CHIEF 700		THE BOSS	THE CHIEF 700	THE BOSS	THE CHIEF 700
12.2	08-034-PM		08-034-PM			PU FOAM	
13	01-011-PM	01-005-PM	01-0011-PM			CAP,REAR, LARGE,THE BOSS/MINIBOSS	CAP,REAR, LARGE,THE CHIEF
14	03-017-PM	03-019-PM	03-017-PM			RUBBER HOUSING,MOTOR- THE BOSS	RUBBER HOUSING,MOTOR- THE CHIEF
15	05-001-PP-SAM	05-002-PP-SAM	05-001-PP-SAM			MOTOR,SAMSUNG ,1,330 W. 220V.	MOTOR,SAMSUNG ,700 W. 220V.
16	03-003-PM		03-003-PM			CUSHION PAD,MOTOR (EPDM-50)	







NO.	PART NO.		DWG. NO.	PICTURE		DESCRIPTION	
	THE BOSS	THE CHIEF 700		THE BOSS	THE CHIEF 700	THE BOSS	THE CHIEF 700
17	02-004-PM	02-011-PM	02-004-PM			BRACKET ANTI-TORQUE, THE BOSS/MINIBOSS	BRACKET ANTI-TORQUE, THE CHIEF
18	02-002-PM	02-010-PM	02-002-PM			BAND BRACKET,HOLDER-THE BOSS/MINIBOSS	BAND BRACKET,HOLDER-THE CHIEF
19	03-007-PM		03-007-PM			WASHER,RUBBER THIN (EPDM-70)	
20	03-013-PM		03-013-PM			WASHER,RUBBER SPACER (EPDM-70)	
21	04-020-AP-STL		04-020-AP			SPRING LOCK ELEVATION SETTING,ASSY,STEEL (metric)	






NO.	PART NO.		DWG. NO.	PICTURE		DESCRIPTION	
	THE BOSS	THE CHIEF 700		THE BOSS	THE CHIEF 700	THE BOSS	THE CHIEF 700
22	02-001-AM	02-009-AM	02-001-AM			FRAME,BODY SUPPORT-THE BOSS/MINIBOSS	FRAME,BODY SUPPORT-THE CHIEF
23	03-001-PM		03-001-PM			WASHER,RUBBER FRICTION (NBR-60)	
24	08-041-PP		08-041-PP			TUBE,NYLON,OD 6 mm. LIQUID AND AIR	
25	03-006-PM		03-006-PM			NOZZLE PROTECTOR DISC, STORAGE (NR-60)	
26	04-015-AP-SST		04-015-AP			BULKHEAD,UNION 6L-6L,ASSY,SSTL	

NO.	PART NO.		DWG. NO.	PICTURE		DESCRIPTION	
	THE BOSS	THE CHIEF 700		THE BOSS	THE CHIEF 700	THE BOSS	THE CHIEF 700
27	01-007-PM		01-007-PM			CAP,FILLER	
28	03-002-PM		03-002-PM			GASKET,VITON,CAP, FILLER &VALVE ASSY(VITON-65)	
29	01-003-PM-WHT	01-002-PM-WHT	01-003-PM-WHT			TANK,FORMULATI ON-6L (NATURAL WHITE)	TANK,FORMULATI ON-4L (NATURAL WHITE)
30	03-005-PM		03-005-PM			BOOT,TANK BASE PROTECTOR	
31	03-016-PM		03-016-PM			FILTER ,TANK	

NO.	PART NO.		DWG. NO.	PICTURE		DESCRIPTION	
	THE BOSS	THE CHIEF 700		THE BOSS	THE CHIEF 700	THE BOSS	THE CHIEF 700
32	04-029-PM-SST	04-028-PM-SST	04-029-PM			PICK-UP TUBE,SSTL OD 6 mm.,6L TANK	PICK-UP TUBE,SSTL OD 6 mm.,4L TANK
33	01-008-PM		01-008-PM			ADAPTER,CAP LIQ-AIR FLOW,LOW PROFILE	
34	04-006-AP-SST		04-006-AP			NEEDLE VALVE ASSY-SSTL	
35	04-013-AP-SST		04-013-AP			ELBOW 1/4 NPT-6L,ASSY,SSTL	
36	03-015-PM		03-015-PM			SEAL WASHER, OUTER, FSFR VALVE	

NO.	PART NO.		DWG. NO.	PICTURE		DESCRIPTION	
	THE BOSS	THE CHIEF 700		THE BOSS	THE CHIEF 700	THE BOSS	THE CHIEF 700
37	03-014-PM-M12		03-014-PM			SEAL WASHER,FSFR VALVE (M12)-VITON -70	
38-1	04-001-PM-20S		04-001-PM			FSFR VALVE,M12x1.5,SSTL,#20	
38-2	04-001-PM-S28		04-001-PM			FSFR VALVE-M12x1.5,SSTL,#28	
38-3	04-001-PM-S37		04-001-PM			FSFR VALVE-M12x1.5,SSTL,#37	
38-4	04-001-PM-S42		04-001-PM			FSFR VALVE-M12x1.5,SSTL,#42	

NO.	PART NO.		DWG. NO.	PICTURE		DESCRIPTION	
	THE BOSS	THE CHIEF 700		THE BOSS	THE CHIEF 700	THE BOSS	THE CHIEF 700
38-5	04-001-PM-S47		04-001-PM			FSFR VALVE-M12x1.5,SSTL,#47	
39	04-014-AP-SST		04-014-AP			BULKHEAD, 6L-1/4NPT.ASSY,SSTL	
40	08-011-PM		08-011-PM			LABEL, WARNING ON CAP,REAR,LARGE	
41	08-001-PM	08-004-PM	08-001-PM			LABEL, MACHINE ID.-THE BOSS 1,330W	LABEL, MACHINE ID.-THE CHIEF 700 W
42	08-015-PM		08-015-PM			LABEL,LIQ-AIR PATHWAY,ADAPTER LOW PROFILE	

NO.	PART NO.		DWG. NO.	PICTURE		DESCRIPTION	
	THE BOSS	THE CHIEF 700		THE BOSS	THE CHIEF 700	THE BOSS	THE CHIEF 700
43	08-009-PM		08-009-PM			LABEL, CAUTION ON TANK	
44	08-007-PM		08-007-PM			LABEL, LIQ-AIR PATHWAY ON BODY	
45	08-010-PM		08-010-PM			LABEL, FILLER CAP	
46	08-014-PM		08-014-PM			LABEL, AUSTRALIAN-BRITISH CONSORTIUM	
47	08-006-PM		08-006-PM			LABEL, CAUTION, BEFORE SWITCH OFF	